



adjustable
up to 3000
(10')
standard

adjustable
up to 30500
(100')
custom

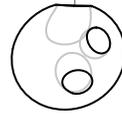

±165 (6.5')

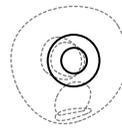

35 (1.4')

88 (3.5')

PENDANTS: one

MOUNTING: mini innie canopy (mud-in), 35mm (1.4') in diameter (exposed), 88mm (3.5') in diameter (overall) x 35mm (1.4')

LAMPING: 1.5w LED or 20w xenon

COAX: adjustable, 3000mm (10') standard / up to 30500mm (100') maximum

MATERIALS: blown glass, braided metal coaxial cable, electrical components, white polyurethane canopy

WEIGHT: approximately 1.1kg (2.4lb)

POWER: remote mounted (fixture does not hook directly to a junction box). Power supplies included

SUPPLIES: remote mounted (fixture does not hook directly to a junction box). Power supplies included

DESCRIPTION

The 'mi' designation in this 28 variant refers to the mini innie canopy. The mini innie canopy is 35mm (1.4') in diameter (exposed), 88mm (3.5') in diameter overall, and 35mm (1.4') deep, which is meant to be mudded into drywall. The pendant drop lengths on this light fixture are adjustable up to the specified maximum. Note: not adjustable after drywall in finished.

28 is an exploration of specificity in manufacturing. Instead of designing form itself, here the intent was to design a system of making that yields form. Individual 28 pendants result from a complex glass blowing technique whereby air pressure is intermittently introduced into and then removed from a glass matrix which is intermittently heated and then rapidly cooled. The result is a distorted spherical shape with a composed collection of imploded inner shapes, one of which acts as a shade for the light source.

Standard 28s are made with clear glass exterior spheres and milk white interior lamp holder cavities. 28s are possible with infinite versatility in colour compositions, sizes and shapes.

NOTES

- + Purchase replacement lamps online at www.bocci.com/shop/bulbs
- + Unless otherwise noted when ordering, all fixtures will be outfitted to be xenon compatible
- + Requires power supplies to be remote mounted

US Patent # D687,740

EU Patent # 001695834-001 to 004

Made in Vancouver, Canada

Vancouver
sales@bocci.com
www.bocci.com

Berlin
europe@bocci.com
www.bocci.com

approx 1.1kg (2.4lb)




MINI INNIE CANOPY

28.1mi

Design by Omer Arbel
PRODUCT SPECIFICATION

© 2020, Bocci Design and Manufacturing Inc. All rights reserved. Any inquiries should be directed to: info@bocci.com

BOCCI

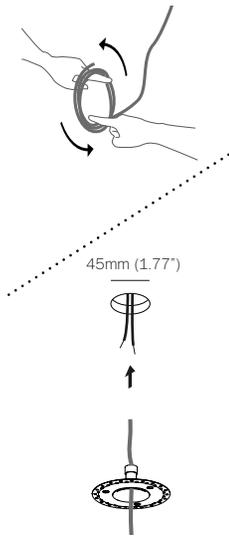

1


Very carefully uncoil the braided coaxial cable in a spool like manner. Insert your index fingers into opposite sides of the roll then rotate your fingers around each other to unroll the coaxial cable.

Use patience: allow the cable to uncoil completely to avoid kinks.

Thread the coaxial cable through the canopy.

Drill a 45mm (1.7") diameter hole in ceiling material. Pull low voltage house wire through the hole.

Note: This low voltage wire will run to a remote mounted power supply.

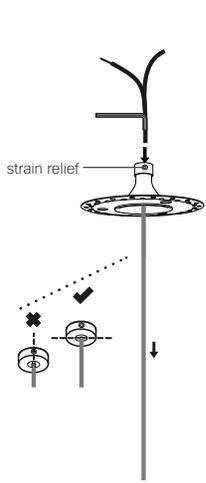

2


Determine the overall drop for the pendant fixture. Use the 2mm Allen key to loosen the setscrew in the canopy and gently feed the cable through until you have reached your desired drop length.

Use Allen key to tighten the setscrew to hold the strain relief and secure the coaxial cable at its new length. Perform a gentle tug test to ensure it is secure.

DO NOT OVERTIGHTEN.

Note: The strain relief is a black plastic collar around the coaxial cable. There is a single slot opening on the side of the strain relief component. It is essential that this opening is oriented at 90 degrees to set screw chamber. There can be no contact between the set screw and the cable.

RISK OF ELECTRIC SHORT!

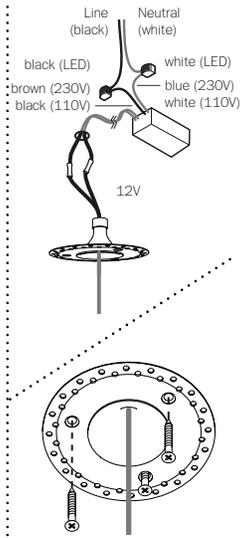

3

Xenon (110V) or LED: connect the black wire to black and white wire to white wire.

Xenon (230V): connect black wire to brown wire and white wire to blue wire.


Connect the house wires to the coaxial cable using #16 butt splices (stagger the splices). Use raw butt splices and heat shrink to simplify the installation.

For multiple pendant installations, ensure that the braided outer wires are all connected to one 12V output wire and all inner insulated wires are connected to the other or a short will occur.

Note: Insulated core is positive and braided exterior is negative.

Affix mini innie canopy to ceiling surface with fasteners provided.

Turn power to fixture on.

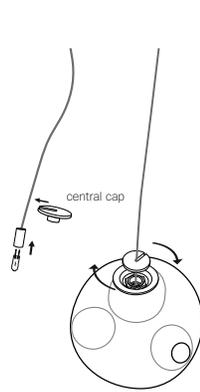


4

Bocci lamps are included. Plug the lamp into the socket. Do not touch the lamp with your bare hands. Ensure power to lamp is working correctly.

Remove the center cap from 28 pendant. Install 28 pendant by sliding the center cap onto the coaxial cable, gently insert the lamp into the pedant, then tighten the center cap connection by hand.

DO NOT OVERTIGHTEN.


Note: when using a dimmer use only low voltage electronic dimmer.

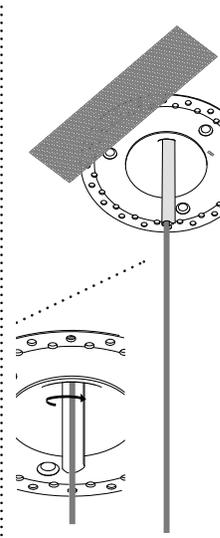

5

Tape the mounting plate edges with fiber mesh drywall tape.


Note: mask the coaxial cable off with painters tape to help with cleanup.

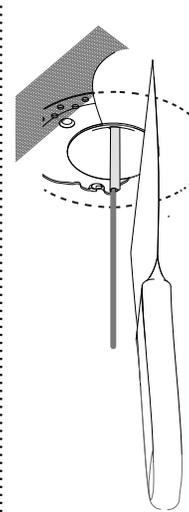

6

Use a drywall filler compound to "mud over" the assembly. Use the raised edge to mud up to to establish a sharp edge and to avoid getting mud in the indentation


Feather from the center of the mounting plate outwards using a large drywall trowel.

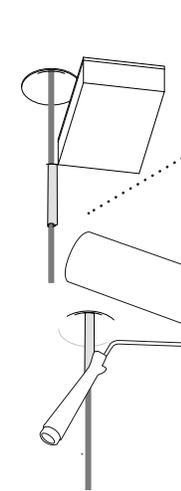

7

Using a foam sanding block, sand entire area until the rim and the edge of the operative component are exposed. For long term performance, it is essential that mud is sanded right down to the plastic rim.

Paint over entire assembly.

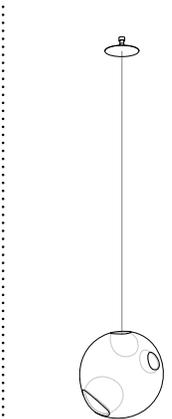

8

Remove masking tape and clean fingerprints from glass surfaces.

Remove the protective film from the center cap after assembly.

For additional assistance, please contact Bocci:

Vancouver
sales@bocci.com
www.bocci.com

Berlin
europe@bocci.com
www.bocci.com

US Patent # D687,740
EU Patent #
001695834-001 to 004

Made in Vancouver,
Canada



MINI INNIE CANOPY

28.1mi

Design by Omer Arbel
PRODUCT INSTALLATION INSTRUCTIONS

© 2020, Bocci Design and Manufacturing Inc. All rights reserved. Any inquiries should be directed to: info@bocci.com

BOCCI